

LAWN SPRINKLER SYSTEM WITH A REDUCED PRESSURE BACKFLOW ASSEMBLY (RPBA)

BACKFLOW ASSEMBLY AND SPRINKLER SYSTEM REMOVAL

If a customer no longer wants to have a backflow prevention assembly installed because they do not use their sprinkler system, then the removal requirements are as follows:

1. Remove the sprinkler main and drain valves and cap or plug the tee on the service line (about 3-4 feet down)
2. Remove backflow assembly and all related piping
3. Remove all sprinkler zone valves and the valve boxes containing them
4. Remove sprinkler heads and sprinkler head risers
5. Remove any automatic sprinkler control boxes
6. You will need to call the City of Meridian Cross Connection Control Department for a final inspection at (208-985-1223) to verify that the backflow preventer and irrigation system has been properly removed and no indication that a sprinkler system exist before burying (backfilling)

CUSTOMERS RESPONSIBILITY AFTER THE
CONNECTION ON THE DOWNSTREAM SIDE
OF THE WATER METER

